

TENMA[®]

72-6855 & 72-6856

BENCH POWER SUPPLIES

INSTRUCTION MANUAL

Table of Contents

| | |
|--------------------------|---|
| Introduction | 2 |
| Specification | 2 |
| Safety | 4 |
| EMC | 5 |
| Installation | 6 |
| Connections | 6 |
| Operation - Main Outputs | 7 |
| Operation - Logic Output | 7 |
| Operation - General | 8 |
| Maintenance | 8 |

Introduction

The 72-6855 and 72-6856 provide high levels of power (up to 305 watts) in a compact and attractive case style.

High resolution controls allow precise setting of voltage and current levels which are indicated on accurate and legible digital meters.

Excellent line and load regulation are matched by low noise and good transient response. High power efficiency ensures that the unit remains cool without any fan noise.

The 72-6855 has two independent and isolated outputs each with a 0 to 35V, 0 to 4A capability. The outputs operate in constant voltage or constant current mode with automatic cross-over and mode indication. Each output has its own on-off switch. Where higher voltages or currents are required the outputs can be wired in either series or parallel to provide voltages up to 70 volts or currents up to 8 Amps.

The 72-6856 has an additional 'logic voltage' output with a 5A current capability. To reflect the increasing usage of low-voltage logic devices, this output can be set to 5 volts or 3.3 volts via a front panel switch.

The total power capability is 280 watts for the dual supply and 305 watts for the triple.

The 72-6855 and 72-6856 incorporate separate digital voltage and current meters on each output. The meters use bright 14mm (0.56") LED displays and have an update rate of 4 per second providing near instantaneous response. Simultaneous metering of voltage and current provides accurate information "at a glance" and avoids any possibility of misinterpretation. When an output switch is set to "off", the current limit setting is displayed enabling conditions to be set before the load is connected.

The 72-6855 and 72-6856 have been designed to meet the stringent requirements of relevant IEC standards for safety and EMC, including harmonics emissions. All outputs are intrinsically short circuit proof, and are protected against external voltages and reverse currents.

Specification

MAIN OUTPUTS

| | |
|--------------------------------------|--|
| Voltage Range: | 0V to 35V minimum |
| Current Range: | 0A to 4A minimum |
| Output Voltage Setting: | By coarse and fine controls. |
| Output Current Setting: | By single logarithmic control. |
| Operating Mode: | Constant voltage or constant current with automatic cross-over. |
| Output Switch: | Electronic. Preset voltage and current displayed when off. |
| Output Terminals: | 4mm terminals on 19mm (0.75") pitch. |
| Output Impedance: | Typically <5m Ω in constant voltage mode. Typically >50k Ω in constant current mode. |
| Output Protection: | Output will withstand up to 40V forward voltage. Reverse protection by diode clamp for reverse currents up to 3A. |
| Load & Line Regulation: | <0.01% of maximum output for a 90% load change or 10% line change. |
| Ripple & Noise (20MHz bandwidth): | Typically <2mVrms, <10mV pk-pk, constant voltage mode. |
| Transient Response: | <200 μ s to within 50mV of set level for 90% load change. |
| Temperature Coefficient: | Typically <100ppm/ $^{\circ}$ C |
| Status Indication: | Output on lamp. Constant current mode lamp. |

METER SPECIFICATIONS (Main Outputs)

| | |
|--------------------|---|
| Meter Types: | Dual 3 digit meters with 14mm (0.56") LEDs. Reading rate 4 Hz. |
| Meter Resolutions: | 100mV, 10mA |
| Meter Accuracies: | Voltage 0.3% of reading ± 1 digit, Current 0.6% of reading ± 1 digit |

LOGIC OUTPUT (Triple only)

| | |
|--------------------------------------|--|
| Voltage: | 5V or 3.3V, selectable by front panel switch. |
| Voltage Accuracy: | $\pm 2\%$ |
| Current Limit: | 5A minimum. |
| Output Terminals: | 4mm terminals on 19mm (0.75") pitch. |
| Output Protection: | Output will withstand up to 7V forward voltage. Diode clamp reverse protection for currents up to 3A. |
| Load Regulation: | <0.5% for a 90% load change. |
| Line Regulation: | <0.1% for a 10% line voltage change. |
| Ripple & Noise (20MHz bandwidth): | Typically <2mV, rms, <10mV pk-pk, constant voltage mode. |
| Transient Response: | Typically <200 μ s to within 50mV of set level for 90% load change. |
| Temperature Coefficient: | Typically <100ppm/ $^{\circ}$ C. |
| Status Indication: | Current limit lamp. |

GENERAL

| | |
|--------------------|--|
| AC Input: | 110V - 240V AC $\pm 10\%$, 50/60Hz. Installation Category II. |
| Power Consumption: | 500VA max. |
| Operating Range: | +5 $^{\circ}$ C to +40 $^{\circ}$ C, 20% to 80% RH. |
| Storage Range: | -40 $^{\circ}$ C to + 70 $^{\circ}$ C. |
| Environmental: | Indoor use at altitudes up to 2000m, Pollution Degree 2. |
| Safety: | Complies with EN61010-1. |
| EMC: | Complies with EN61326. |
| Size: | 260 x 160 x 320mm (WxHxD). |
| Weight: | 4.3kg |

This power supply is a Safety Class I instrument according to IEC classification and has been designed to meet the requirements of EN61010-1 (Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use). It is an Installation Category II instrument intended for operation from a normal single phase supply.

This instrument has been tested in accordance with EN61010-1 and has been supplied in a safe condition. This instruction manual contains some information and warnings which have to be followed by the user to ensure safe operation and to retain the instrument in a safe condition.

This instrument has been designed for indoor use in a Pollution Degree 2 environment in the temperature range 5°C to 40°C, 20% - 80% RH (non-condensing). It may occasionally be subjected to temperatures between +5°C and -10°C without degradation of its safety. Do not operate while condensation is present.

Use of this instrument in a manner not specified by these instructions may impair the safety protection provided. Do not operate the instrument outside its rated supply voltages or environmental range.

WARNING! THIS INSTRUMENT MUST BE EARTHED

Any interruption of the mains earth conductor inside or outside the instrument will make the instrument dangerous. Intentional interruption is prohibited. The protective action must not be negated by the use of an extension cord without a protective conductor.

When the instrument is connected to its supply, terminals may be live and opening the covers or removal of parts (except those to which access can be gained by hand) is likely to expose live parts. The apparatus shall be disconnected from all voltage sources before it is opened for any adjustment, replacement, maintenance or repair. Capacitors inside the power supply may still be charged even if the power supply has been disconnected from all voltage sources but will be safely discharged about 10 minutes after switching off power.

Any adjustment, maintenance and repair of the opened instrument under voltage shall be avoided as far as possible and, if inevitable, shall be carried out only by a skilled person who is aware of the hazard involved.

If the instrument is clearly defective, has been subject to mechanical damage, excessive moisture or chemical corrosion the safety protection may be impaired and the apparatus should be withdrawn from use and returned for checking and repair.

Make sure that only fuses with the required rated current and of the specified type are used for replacement. The use of makeshift fuses and the short-circuiting of fuse holders is prohibited.

Do not wet the instrument when cleaning it.

The following symbols are used on the instrument and in this manual:-

| | |
|---|--------------------------|
|  | Earth (ground) terminal. |
|  | mains supply OFF. |
|  | mains supply ON. |
|  | alternating current (ac) |
|  | direct current (dc) |

This instrument has been designed to meet the requirements of the EMC Directive 89/336/EEC. Compliance was demonstrated by meeting the test limits of the following standards:

Emissions

EN61326 (1998) EMC product standard for Electrical Equipment for Measurement, Control and Laboratory Use. Test limits used were:

- a) Radiated: Class B
- b) Conducted: Class B
- c) Harmonics: EN61000-3-2 (2000) Class A; the instrument is Class A by product category.

Immunity

EN61326 (1998) EMC product standard for Electrical Equipment for Measurement, Control and Laboratory Use.

Test methods, limits and performance achieved were:

- a) EN61000-4-2 (1995) Electrostatic Discharge : 4kV air, 4kV contact, Performance A.
- b) EN61000-4-3 (1997) Electromagnetic Field, 3V/m, 80% AM at 1kHz, Performance B.
- c) EN61000-4-11 (1994) Voltage Interrupt, 1 cycle, 100%, Performance B.
- d) EN61000-4-4 (1995) Fast Transient, 1kV peak (AC line), 0.5kV peak (DC Outputs), Performance B.
- e) EN61000-4-5 (1995) Surge, 0.5kV (line to line), 1kV (line to ground), Performance B.
- f) EN61000-4-6 (1996) Conducted RF, 3V, 80% AM at 1kHz (AC line only; DC Output connections <3m not tested), Performance A.

According to EN61326 the definitions of performance criteria are:

Performance criterion A: 'During test normal performance within the specification limits.'

Performance criterion B: 'During test, temporary degradation, or loss of function or performance which is self-recovering'.

Performance criterion C: 'During test, temporary degradation, or loss of function or performance which requires operator intervention or system reset occurs.'

Where Performance B is stated it is because DC Output regulation may deviate beyond Specification limits under the test conditions. However, the possible deviations are still small and unlikely to be a problem in practice.

Note that if operation in a high RF field is unavoidable it is good practice to connect the PSU to the target system using screened leads which have been passed (together) through an absorbing ferrite sleeve fitted close to the PSU terminals.

Cautions

To ensure continued compliance with the EMC directive observe the following precautions:

- a) after opening the case for any reason ensure that all signal and ground connections are remade correctly and that case screws are correctly refitted and tightened.
- b) In the event of part replacement becoming necessary, only use components of an identical type, see the Service Manual.

Installation

Mains Operating Voltage

This instrument has a universal input range and will operate from a nominal 115V or 230V mains supply without adjustment. Check that the local supply meets the AC Input requirement given in the Specification.

Mains Lead

When a three core mains lead with bare ends is provided this should be connected as follows:

| | | | |
|--------------|---|---------------|---|
| BROWN | - | MAINS LIVE | |
| BLUE | - | MAINS NEUTRAL |  |
| GREEN/YELLOW | - | EARTH | Safety Earth Symbol |

When fitting a fused plug a 5 amp fuse should be fitted inside the plug. As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked by the letter E or by the safety earth symbol shown above or coloured green or green-and-yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

WARNING! THIS INSTRUMENT MUST BE EARTHED.

Any interruption of the mains earth conductor inside or outside the instrument will make the instrument dangerous. Intentional interruption is prohibited.

Connections

All connections are made from the front panel.

The load should be connected to the positive (red) and negative (black) terminals marked OUTPUT.

The terminal marked  is connected to the chassis and safety earth ground.

Operation - Main Outputs

The operation of both main outputs is identical; the following description applies to both.

Setting Up the Output

With the POWER switch on (I) and the  output off the output voltage and current limit can be accurately preset using the VOLTAGE and CURRENT controls; the left-hand meter shows the set voltage and the right-hand meter shows the set maximum current.

When the  output switch is switched on, the ON lamp lights; the left-hand meter now shows the actual voltage and the right-hand meter the actual load current.

Constant Voltage

The output voltage is adjusted using the coarse and fine VOLTAGE controls; the CURRENT control sets the maximum current that can be supplied.

Constant Current

If the load resistance is low enough such that, at the output voltage set, a current greater than the current limit setting would flow, the power supply will automatically move into constant current operation. The current output is adjusted by the CURRENT control and the VOLTAGE controls set the maximum voltage that can be generated.

The CC lamp lights to show constant current mode.

Instantaneous Current Output

The current limit control can be set to limit the continuous output current to levels down to 10mA. However, in common with all precision bench power supplies, a capacitor is connected across the output to maintain stability and good transient response. This capacitor charges to the output voltage and short-circuiting of the output will produce a current pulse as the capacitor discharges which is independent of the current limit setting.

Protection

The output has intrinsic short-circuit protection and is protected from reverse voltages by a diode; the continuous reverse current must not exceed 3A, although transients can be much higher. The output is protected against externally applied forward voltages of up to 40V.

Operation - Logic Output

Output Voltage

The output voltage can be set to 3.3V or 5.0V by the front panel slide switch beside the centre terminals. Voltage accuracy is $\pm 2\%$.

Current Limit

The output will go into current limit at between 5A and 6A; the CURRENT LIMIT lamp lights in this condition.

Protection

The output has intrinsic short-circuit protection and is protected from reverse voltages by a diode; the continuous reverse current must not exceed 3A, although transients can be much higher.

The output is protected against externally applied forward voltages of up to 7V.

Operation - General

Connection to the Load

The load should be connected to the positive (red) and negative (black) output terminals. Both are fully floating and either can be connected to ground.

Series or Parallel Connection with Other Outputs

The outputs of the power supply are fully floating and may be used in series with other power supply units to generate high DC voltages up to 300V DC.

The maximum permissible voltage between any terminal and earth ground (\perp) is 300VDC; the maximum permissible voltage between either terminal of one output and any terminal of another output on the same supply is also 300VDC.

WARNING! Such voltages are exceedingly hazardous and great care should be taken to shield the output terminals for such use. On no account should the output terminals be touched when the unit is switched on under such use. All connections to the terminals must be made with the power switched off on all units.

It should be noted that the unit can only source current and cannot sink it, thus units cannot be series connected in anti-phase.

The unit can be connected in parallel with others to produce higher currents. Where several units are connected in parallel, the output voltage will be equal to that of the unit with the highest output voltage setting until the current drawn exceeds its current limit setting, upon which the output will fall to that of the next highest setting, and so on. In constant current mode, units can be connected in parallel to provide a current equal to the sum of the current limit settings.

Note that the output terminals are rated at 15A maximum; if several outputs are operated in parallel to source higher currents than this the junction should be made at a separate point, not one of the terminals.

Ventilation

The power supply is very efficient but nevertheless can generate significant heat at full power. The supply relies on convection cooling only and it is therefore important that ventilation is never restricted if performance and safety are to be maintained.

Maintenance

For service repair and calibration please contact your local Tenma distributor or go to www.tenma.com

Fuse

The correct fuse type is: 10 Amp 250V HBC time-lag(T), 5 x 20mm.

Note that the main function of the fuse is to make the instrument safe and limit damage in the event of failure of one of the switching devices. If a fuse fails it is therefore very likely that the replacement will also blow, because the supply has developed a fault; in such circumstances the instrument will need to be returned to the manufacturer for service.

Make sure that only fuses of the required rated current and specified type are used for replacement. The use of makeshift fuses and the short-circuiting of fuse-holders is prohibited.

To replace a fuse, first disconnect the instrument from the AC supply. Remove the 6 cover (if necessary) screws and lift off the cover. Replace the fuse with one of the correct type and refit the cover.

Cleaning

If the PSU requires cleaning use a cloth that is only lightly dampened with water or a mild detergent. Polish the display window with a soft dry cloth.

WARNING! TO AVOID ELECTRIC SHOCK, OR DAMAGE TO THE PSU, NEVER ALLOW WATER TO GET INSIDE THE CASE. TO AVOID DAMAGE TO THE CASE OR DISPLAY WINDOW NEVER CLEAN WITH SOLVENTS.

TENMA[®]
TEST EQUIPMENT
405 Pioneer Blvd.
Springboro, Ohio 45066

Book Part No. 48511-0430 Issue 3